



REMARKABLE FILE TRANSFER PROGRAM

On Snap-in™ ROM for the TRS-80 Model 100

Quick Reference Guide

Installation

Turn off M-100. Pry off cover on back. Press in ROM, label in same direction as M-100 Serial number, tiny finger in slot. In BASIC type CALL 63012 (ENTER). Reinstall cover.

Run DISK+ (M-100)

At main menu, place cursor on DISK+ (ENTER).

Run DISK+ (Other computer)

Model I: Turn on the other computer with DISK+ disk in drive 0, datadisk in drive 1. Type in date and time, at TRSDOS ready prompt, type DISKPL (ENTER)

Model II, 12, 16: Turn on the other computer with DISK+ disk in drive 0, then at TRSDOS Ready prompt type DISKPL (ENTER).

Model III: Turn on the other computer with DISK+ disk in drive 0, type date and time, then DISK+ runs automatically. Or, at TRSDOS Ready prompt type DISKPL (ENTER).

Model 4: Turn on the other computer with DISK+ disk in drive 0, then set date and DISK+ runs automatically. Or, at TRSDOS Ready prompt, type DISKPL (ENTER).

MS-DOS Computers: Turn on the other computer with DISK+ disk in drive A:, set time a date and DISK+ runs automatically. Or, at A> prompt type DISKPL (ENTER).

Apple II Computers: Turn on computer with DISK+ disk in drive 1, DISK+ runs automatically. Or, at Apple DOS prompt type PR#6 (ENTER).

CP/M Computers: Insert (properly configured) DISK+ disk in drive A:, turn on computer and type DISKPL (ENTER).

Function Summary (Ram Files):

F1 – Disk: View Disk Directory (Disk files).

F2 – Name: Rename Ram file. Type in name (up to 6 letters, first must be alphabetic character, A-Z), ENTER.

F3 – Stat: Reset serial stats that DISK+ uses. F1 for all MS DOS and TRSDOS computers, F2 most CP/M, F3 for Apple II computers. Or, type in your own (ENTER).

F4 – Size: Get size of any file in bytes.

F5 – Kill: Kill (delete) any file in RAM. You must confirm with "Y", any other key aborts kill.

Portable Computer Support Group
11035 Harry Hines Blvd., #207 Dallas, TX 75229
1-214-351-0564



REMARKABLE FILE TRANSFER PROGRAM

On Snap-in™ ROM for the TRS-80 Model 100

Quick Reference Guide

F6—Svall: Save all files from Ram to Disk in .SD (Subdirectory) file. Confirm with "Y", then name file with up to 6 letters (ENTER). Cursor moves from file to file automatically.

F8—Menu: Return to main menu.

ENTER: Save a single file to Disk directory.

Function Summary (Disk Files):

F1—Ram: Return to Ram Files.

F4—Size: Get size of file in bytes.

F5—Kill: Kill file (or .SD subdirectory) on disk, confirm with "Y".

F6—Ldall: Load all files from .SD directory to Ram. Confirm with "Y". Replaces ALL files in Ram.

F8—Menu: Return to main menu.

ENTER: With cursor on single file, loads file to Ram.

ENTER: With cursor on .SD file, loads directory. USING: xxxxxx.SD appears, subdirectory functions follow.

Function Summary (Subdirectory files):

F1—Disk: View Ram Files, still USING: xxxxxx.SD. You could then save a single file into the Subdirectory.

F4—Size: Size a file in the Subdirectory.

F5—Kill: Kill a file in the Subdirectory. Confirm with "Y".

F6—Ldall: Load all files from .SD directory to Ram. Confirm with "Y". Replaces ALL files in Ram.

F8—Menu: Return to main menu.

File Transfer Utility

Press ESC, BREAK, CLEAR, or "+" on other computer's keyboard. Menu appears. Follow screen prompts to transfer documents to or from your other computer's system to DISK+ disk.

Also functions to Exit DISK+ or Return to DISK+. TRS-80 computers can Set Default Drive.

Queueing:

DISK+ allows you to enter up to 16 commands ahead. They are performed when previous commands are complete.

Shift-Break:

Aborts any command in progress, returns to Ram Files menu.

Portable Computer Support Group
11035 Harry Hines Blvd., #207 Dallas, TX 75229
1-214-351-0564